

WARNING

SDAC Control Programming User Name & Password

Change the default SDAC login credentials

- The SDAC control panel has a default username & password that should be changed by the dealer after powering up the control.
- Be sure to record the new username & password, IP and MAC address of each SDAC in a safe location for future reference.

Loss of changed login credentials

- **This SDAC username & password is NOT recoverable by the dealer on-site via hardware or software.**
- To reset the username and/or password back to default, the SDAC PCB must be returned to the Keyscan factory to have engineering reset this board. **There is a fee for each SDAC board reset.**
- Dealer's should first contact Keyscan Technical Support (1-888-539-7226) to review the SDAC login process to ensure that the password has been changed before contacting the RMA department.
- dormakaba RMA department can be contacted at 1-888-539-7226 X 262 for details on pricing, payments and shipping requirements.