


Saffire LX-M & Saffire EVO LZ-M

Euro mortise lock case 395


Half Euro knob profile cylinder

Drilling template

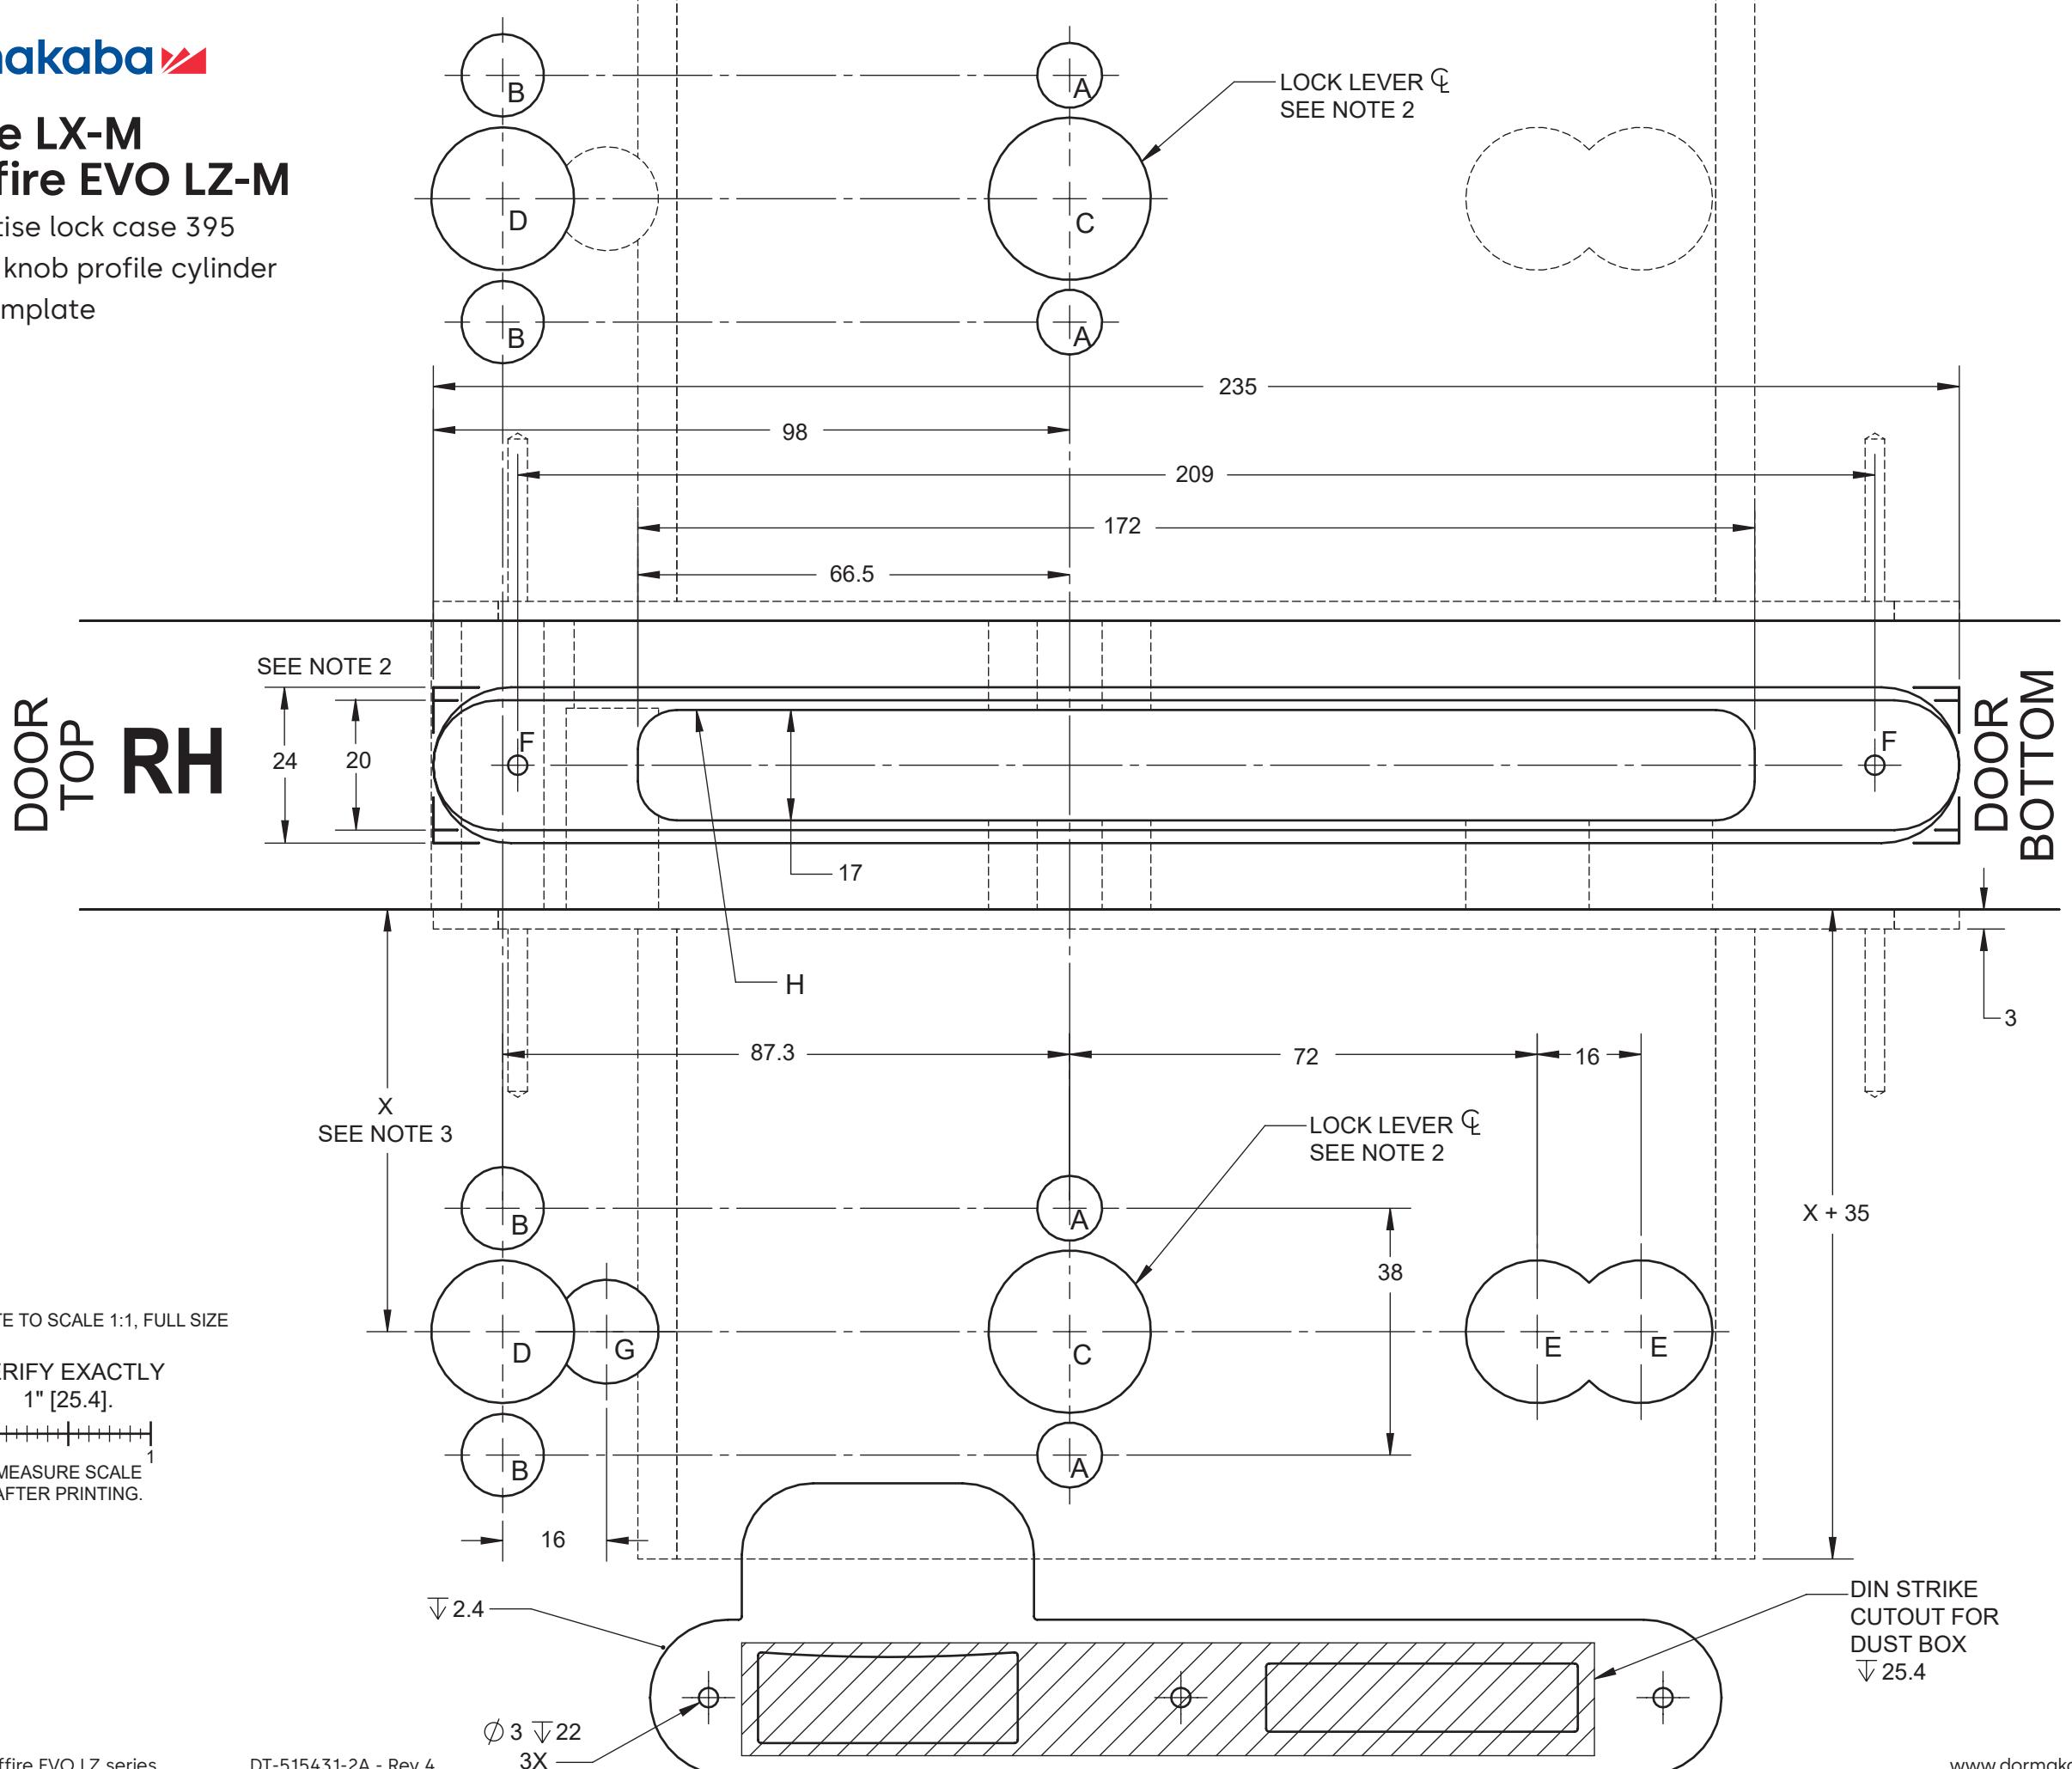


HOLE ID	DIM [mm]	COMMENTS
A	Ø 10	*
B	Ø 12.5	*
C	Ø 25	*
D	Ø 22	*
E	Ø 22	* DRILL TO LOCK CASE POCKET HOLE. ONE SIDE ONLY.
F	Ø 3	▽ 22
G	Ø 16	TO WALL H

* UNLESS OTHERWISE NOTED,
DRILL HALF DOOR THICKNESS ON BOTH SIDES.

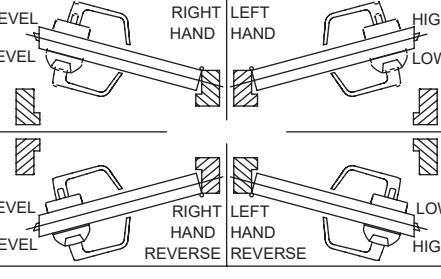

NOTES:

1. FOR DIMENSIONS AND TOLERANCES REFER TO CORRESPONDING DOOR PREPARATION DRAWING IP-516431-2.
2. TO CUT OUT AS PER FOREND DIMENSION (20 OR 24 mm, ROUND OR SQUARE ENDS).
3. BACKSET SHOWN FOR REFERENCE ONLY. ADJUST BACKSET AS PER LOCK CASE.
4. SYMBOLS:
 - ▽ DEEP
 - C CENTERLINE OF DOOR
 - Ø DIAMETER
5. ALL DIMENSIONS ARE IN MILLIMETERS [mm].

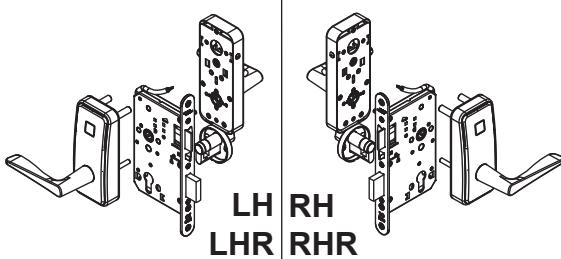

WARNING


WARNING

To verify lock coverage and door operation meets expectations, dormakaba strongly recommends completing a full door mockup. This will ensure that all necessary products and parts for a successful installation are included.

Always validate that you have selected the correct template for specific lock model being installed. The same lock model can be offered with different locking device options.

Always validate after printing to confirm the dimensions listed on the drawing have printed on a 1:1 scale.

If you have any questions, please contact your local sales representative or authorized reseller.

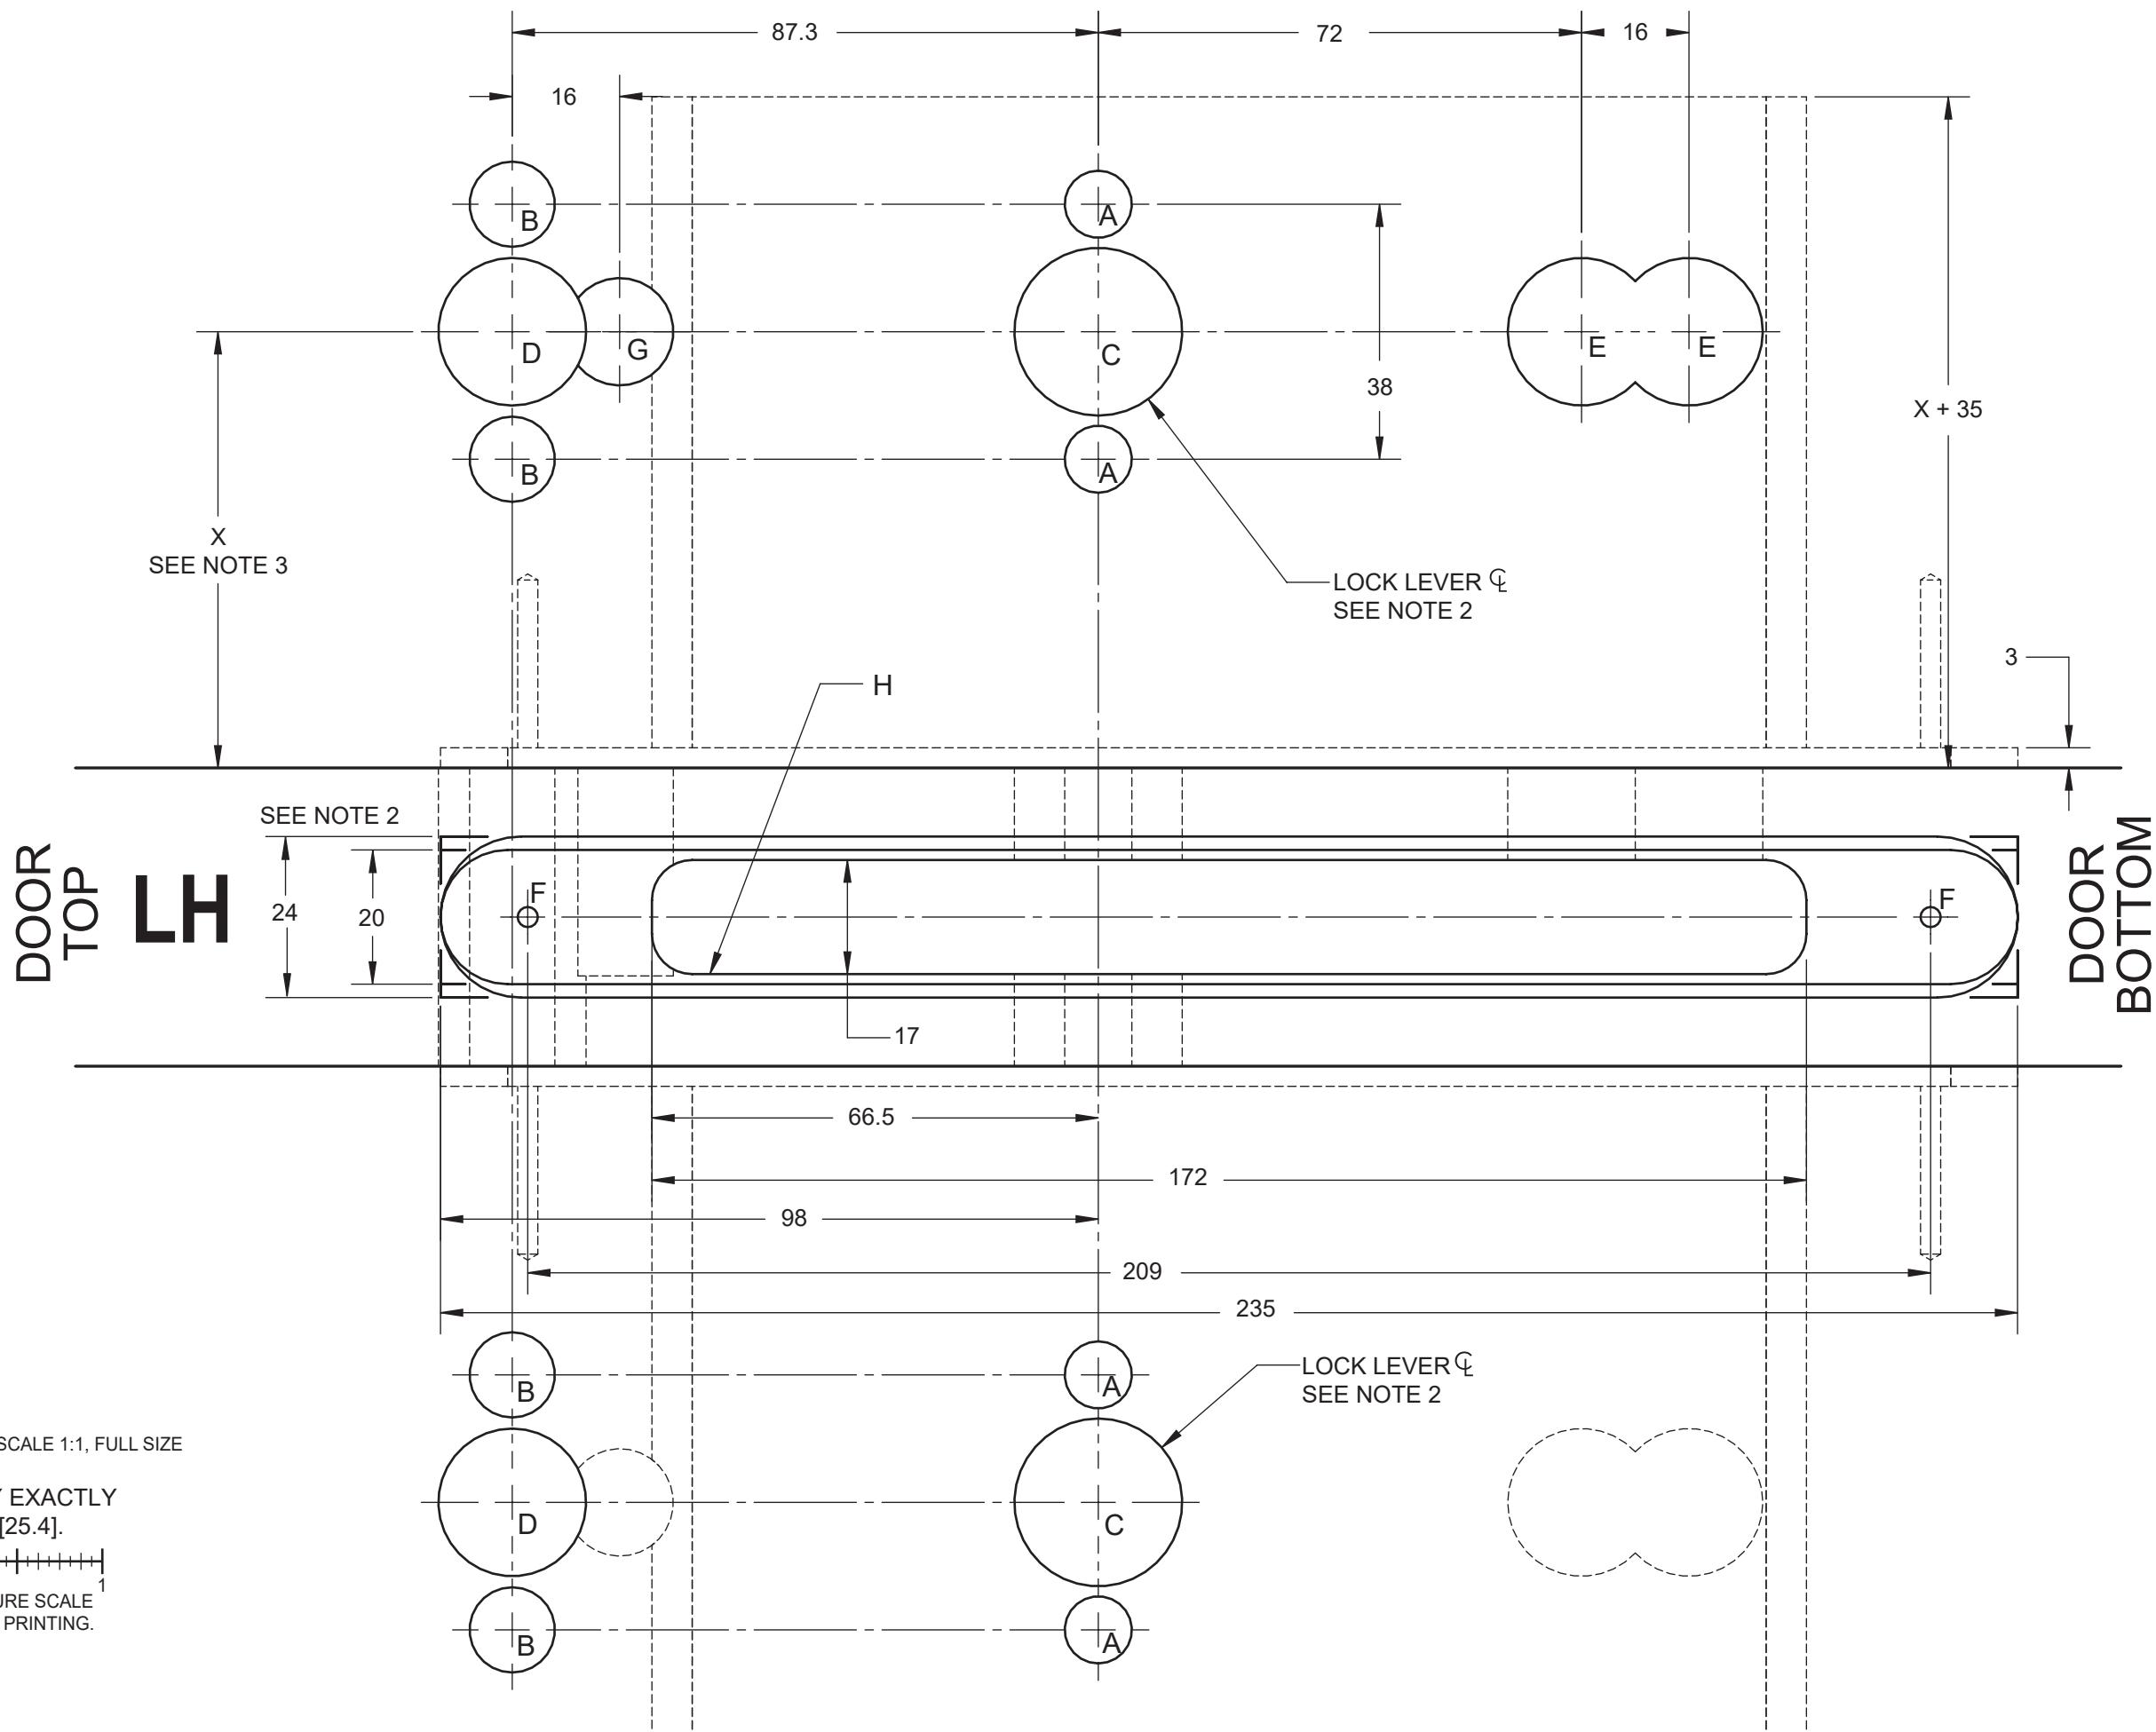

TEMPLATE TO SCALE 1:1, FULL SIZE

VERIFY EXACTLY
1" [25.4].

0 1
MEASURE SCALE
AFTER PRINTING.