




dormakaba

**TEMPLATE for
RCI brand VR165
VERTICAL ROD STRIKE**

INSTRUCTIONS

1. Close the door and place the template under the retractable latch.
2. Use projection of latch to align the vertical and horizontal centerline of the strike.
3. Center punch the two mounting holes along with the wire access hole shown on the template.
4. Open the door and remove the template.
5. Refer to the installation instructions for wiring and final installation.

For Double Door Applications with back set of 2-3/4" or 3", ignore horizontal centerline and mount strikes end to end without Lockdown Clamps. Strike ends should meet at the gap between the doors.

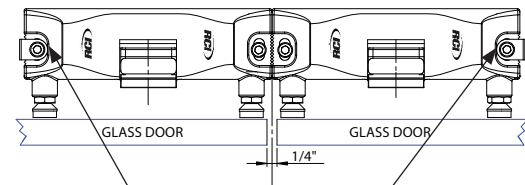

Use 2 Lockdown Clamps on exterior ends only.

© 2024 dormakaba Canada Inc.
www.dormakaba.us • Phone: 1.800.265.6630
Email: sales_RCI@dormakaba.com

TVR165
ECN2313
R07-24AD

