





dormakaba

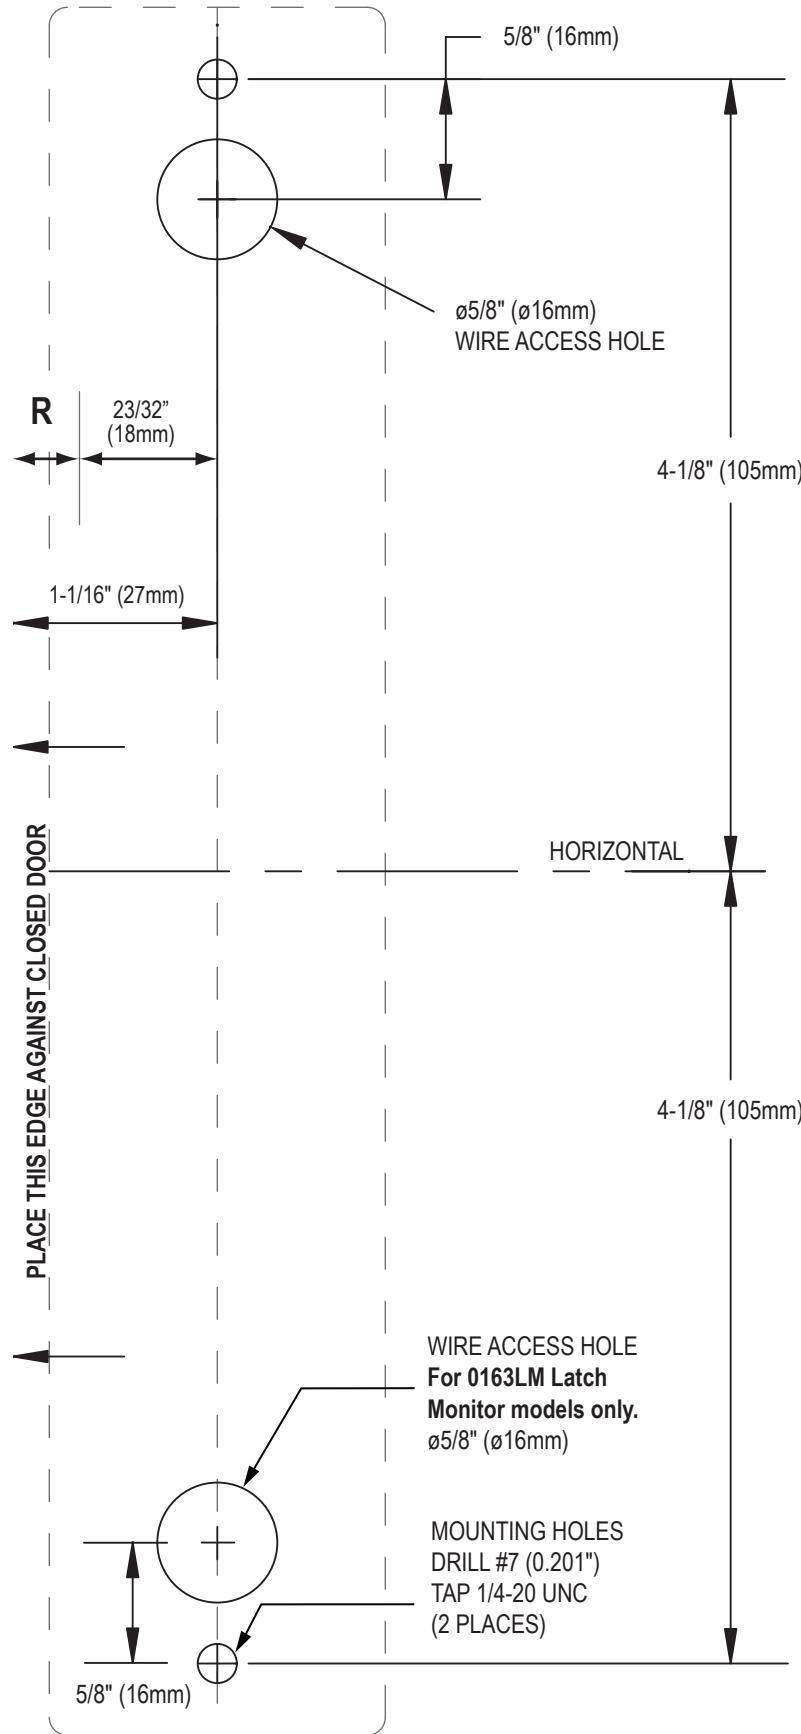

## TEMPLATE for RCI 0163 and 0163LM SURFACE MOUNTED RIM STRIKE

### INSTRUCTIONS

1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole(s) as shown.
3. Drill and tap the two mounting holes and drill the wire access hole(s).
4. Refer to the installation instructions IS0163 for wiring and final installation.

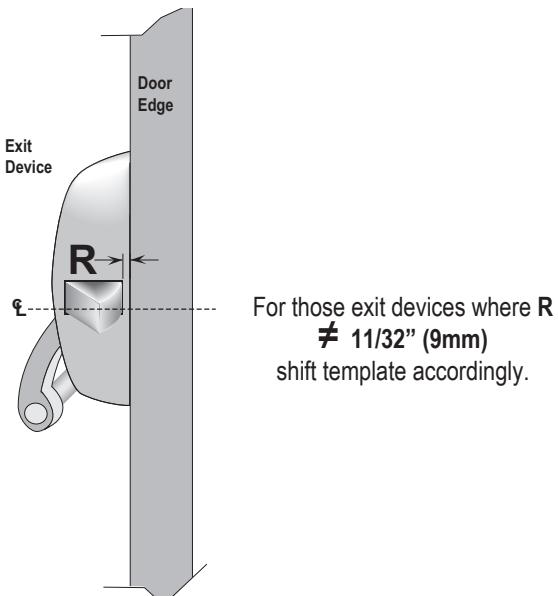

© 2024 dormakaba Canada Inc.  
www.dormakaba.us • Phone: 1.800.265.6630 • Email: sales\_RCI@dormakaba.com

T0163

PCN2208  
R01-23GR